



MORE REASONS TO FEEL GOOD

LOAD-BEARING
INSULATION
FOR GROUND SLABS

INSTALLATION INSTRUCTIONS JULY 2015



GEOCELL
FOAM GLASS GRAVEL

A HIGH QUALITY RECYCLING GLASS PRODUCT

IT'S THAT SIMPLE


GEOCELL® INSTALLATION STEP BY STEP

Preliminary note: The use of GEOCELL® in the capillary fringe of groundwater or water source areas, is not recommended. Install drainage system/capillary moisture barrier if required.



EXCAVATION

Excavate immediately prior to the introduction of GEOCELL® to meet flatness and compressive strength in accordance with the object-related requirements. Excavate to formation level and trim/remove any loose material to provide a uniform flat surface. Lay sewage pipes in pipe trenches and fill with sand on subgrade level.

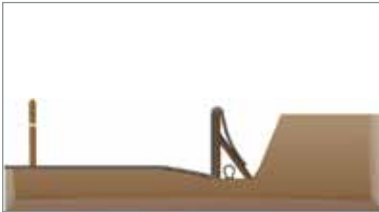


LAY GEOTEXTIL

Install auxiliary formwork for GEOCELL® and install non-woven geotextile 150g/m² separation membrane which is to be wrapped up the edges of the completed GEOCELL® installation and overlapped with the surface geotextile. Position splice bars marking the compacted (final) height of GEOCELL®, at regular intervals.



INSTALL GEOCELL®

Filling in the work area can be done by dumper or by wheel barrow to simply, easily and quickly spread GEOCELL® to the required loose thickness by hand using rakes.

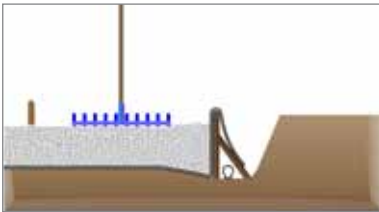


LEVEL GEOCELL®

For smaller sites, level GEOCELL® uniformly to the marked height using an excavator shovel and rakes. For larger construction sites a mechanical distribution is carried out before the head by a charger or a shovel. Driving over the uncompacted material should be avoided, as pre-compaction increases material consumption.




COMPACTION OF GEOCELL®

For small sites, compacting shall be performed by a lightweight vibrating shovel compactor (< 100 kg, frequency ~100Hz). Excessive compaction leads to increasing material consumption, but does not have a negative impact on the technical specifications. For design thickness greater than 300mm, placing and compaction is to be undertaken in two or three separate layers.

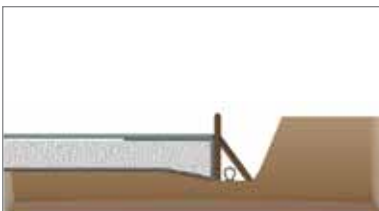

POLYETHYLENE SEPARATION LAYER

Wrap-up the edges of the geotextile to cover the GEOCELL® layer. Protect GEOCELL with overlapping PE-foil.

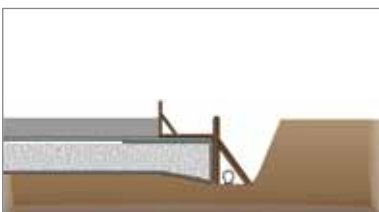

INSTALL FORMWORK FOR SLAB

Install formwork for the foundations slab directly on the finished GEOCELL surface and pour slab to meet static requirements

GEOCELL® FOAM GLASS GRAVEL

THE ECOLOGICAL ALTERNATIVE FOR ALL FOUNDATIONS.

CE EN-13055-2

APPROVED QUALITY

DIBT-ZULASSUNG Z-23.34-1579

LABELED WITH THE AUSTRIAN ECOLOGIC LABEL



GERMANY: GEOCELL Schaumglas GmbH

Tel: +49 (37421) 20782 Fax: +49 (37421) 26640

kontakt@geocell-schaumglas.eu, www.geocell-schaumglas.eu

AUSTRIA: GEOCELL Schaumglas GmbH

Tel: +43 (7735) 67220 Fax: +43 (7735) 67220-58

kontakt@geocell-schaumglas.eu, www.geocell-schaumglas.eu

UNITED KINGDOM: Mike Wye & Associates Ltd

Buckland Filleigh Sawmills, Buckland Filleigh, Devon, EX21 5RN

Tel: +44 (0) 1409 281644 Fax: +44 (0) 1409 281669

sales@mikewye.co.uk, www.mikewye.co.uk

IRELAND, NORTHERN IRELAND: Linham Construction Ltd.

1-2 Marino Mart, Fairview, Dublin 3

Telephone: (01) 833 6740

admin@linham.ie www.linham.ie



PASSIVHAUS
Austria

GEOCELL
FOAM GLASS GRAVEL

A HIGH QUALITY RECYCLING GLASS PRODUCT